



**acs**  
**AFRICAN CORK SUPPLIERS**


### **Instructions for laying cork floor tiles**

1. The floor must be completely smooth, dry, clean and dustless – remove irregularities and sand the surface. Cork tiles can be laid directly onto cement or firm wood.
2. Leave the packs of tiles open for 24 hours before laying (in order to adjust to the room temperature and humidity)
3. The product is natural and therefore minor shade variations may occur. Unpack the tiles and first lay out on the floor to ensure good matching.
4. Mark the position for the first tile by checking the square in both directions from the center lines of the room.
5. Use contact adhesive in accordance with manufacturer's instructions. Lay the center tile carefully in position pressing it well and paying particular attention to the edges.
6. Lay adjoining tiles following numbered sequence, place each tile in a position that excludes air, and make sure that the joints and edges butt firmly together.



**acs**  
**AFRICAN CORK SUPPLIERS**

7. To ensure a precise fit, place tile to be cut over the last full tile. Place a further tile as a marker over the tile to cut and mark off with a pencil. Cut it with a sharp knife accordingly.

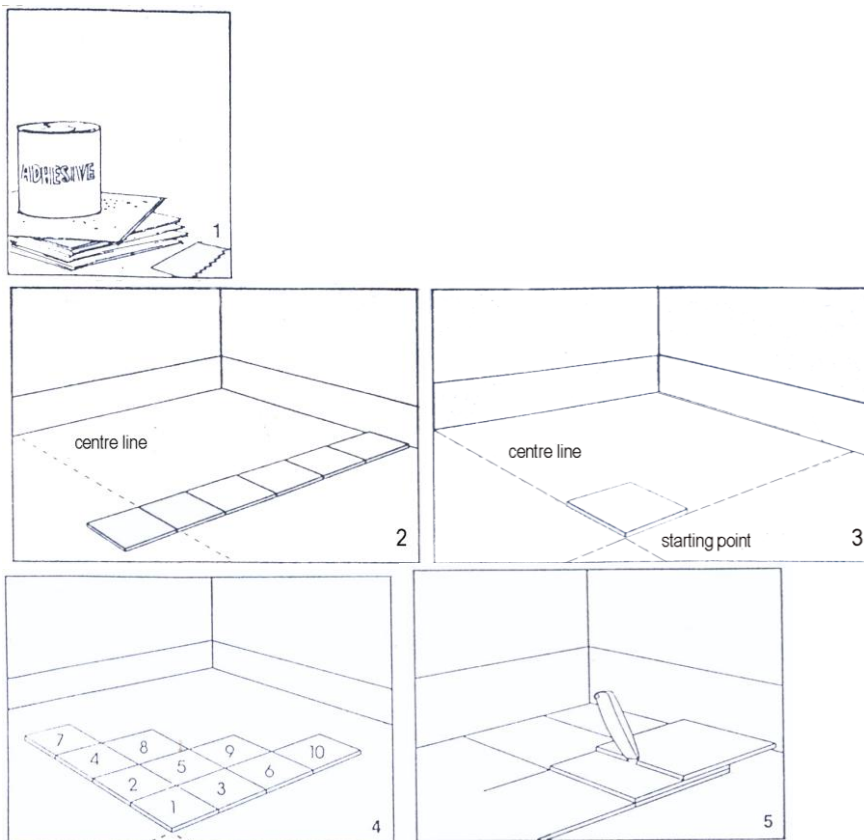

### Recommended products

Contact adhesive – Genkem

Varnish – Polyurethane varnish



**acs**  
**AFRICAN CORK SUPPLIERS**